REPAIR PARTS ILLUSTRATION


When ordering repair parts, always give the following information:

- 1. Model, serial, and product number
- 2. Type of gas
- 3. Item number
- 4. Parts description

Repair Parts List

Item		
No.	Parts Description	
1	DRAFT HOOD	
2	HEAT TRAP (COLD) - SOME MODELS	
3	HEAT TRAP (HOT) - SOME MODELS	
4	COLD WATER DIP TUBE	
5	ANODE ROD	
6	TEMPERATURE & PRESSURE RELIEF VALVE (LOCATED TOP OR SIDE)	•
7	DRAIN VALVE	
8	GAS CONTROL VALVE/THERMOSTAT (with thermal switch wire lead)	*
9	OUTER DOOR	
10	BASE-RING FILTER	
11A*	PILOT / THERMOPILE ASSEMBLY KIT (Natural Gas)	*
11B*	PILOT / THERMOPILE ASSEMBLY KIT (L.P. Gas)	*
12A*	BURNER (Natural Gas)	*
12B*	BURNER (L.P. Gas)	*
13A*	MANIFOLD / BURNER ASSEMBLY (Natural Gas)	*
13B*	MANIFOLD / BURNER ASSEMBLY (L.P. Gas)	*
14*	MANIFOLD COMPONENT BLOCK	*
15*	MANIFOLD DOOR GASKET	*
16*	VIEWPORT ASSEMBLY	*

^{*}Pictured on next page.

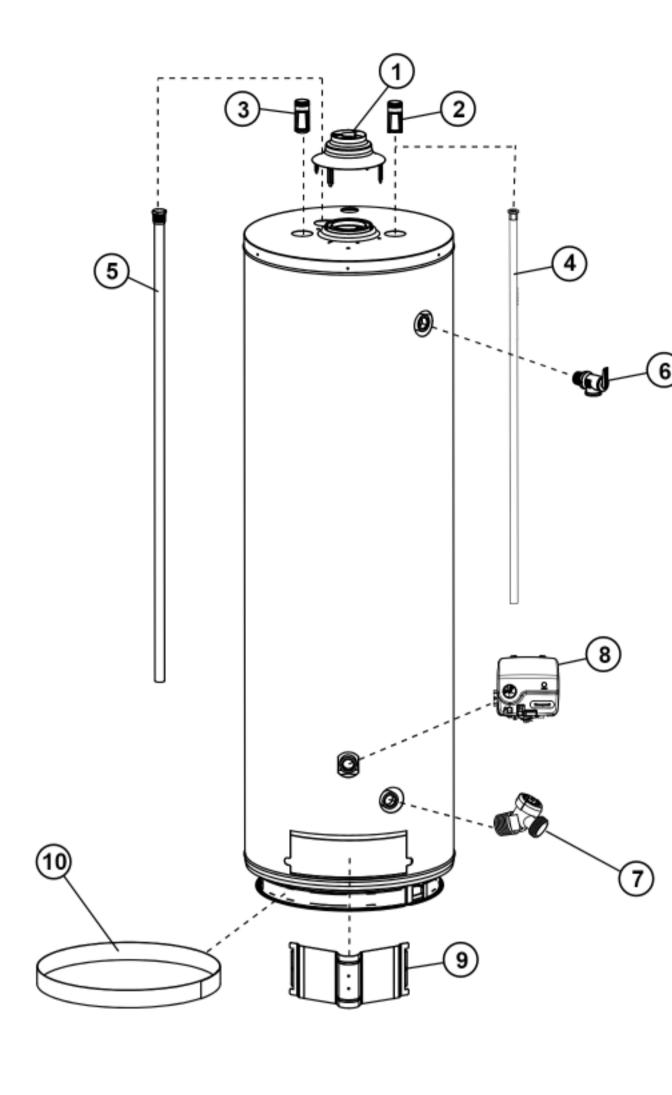

LEGEND

- ▲ Special anode rod. (See "Anode Rod / Water Odor" section.
- Temperature and Pressure Relief Valve is required, but may not be factory installed
- ★ Unique: FVIR System parts

Listed Parts Kits and Illustrations

Item 11A: Pilot / Thermopile Assembly kit, which contains the pilot / pilot tube assembly, thermopile, and igniter electrode. (Natural Gas)

Item 11B: Pilot / Thermopile Assembly kit, which contains the pilot / pilot tube assembly, thermopile, and igniter electrode. (L.P. Gas)

Item 12A: Burner (Natural Gas/Low Nox)

Item 12B: Burner (L.P. Gas)

Item 13A: Manifold / Burner Assembly: contains the door, gasket, manifold tube, pilot / thermopile assembly, manifold component block, thermal switch, and burner. (Natural Gas/Low Nox)

Item 13B: Manifold / Burner Assembly: contains the door, gasket, manifold tube, pilot / thermopile assembly, manifold component block, thermal switch, and burner. (L.P. Gas)

Item 14: Contains manifold component block

Item 15: Contains manifold door gasket

Item 16: Contains view port

